







# REFILL PG-40 dan CL-41





[www.printermurah.com](http://www.printermurah.com)



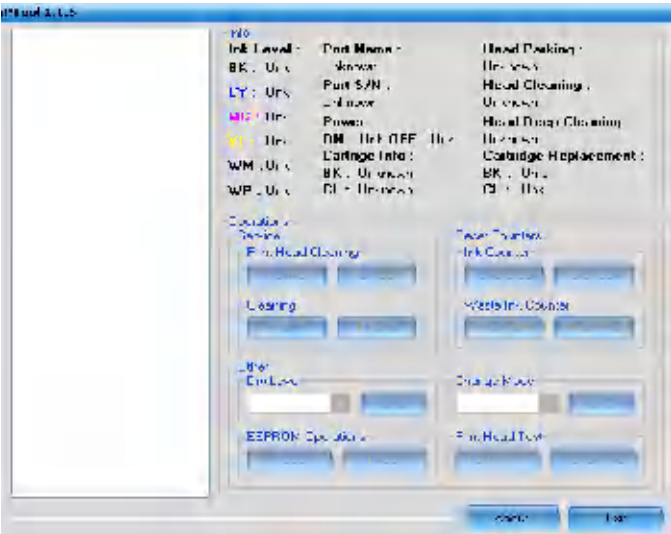
| No. | Gambar   | Keterangan  |
|-----|--|---|
| 1   |  A photograph showing the front-loading cartridge compartment of a printer. The compartment is open, revealing two slots for cartridges. The printer is white and the background is slightly blurred.                     | Buka penutup printer, tunggu sampai cartridge ke posisi kiri. |
| 2   |  A close-up photograph of a person's hand using a green utility knife to carefully cut through the clear plastic cover of a printer cartridge. The cartridge is resting on a white surface.                              | Lepas cover cartridge dengan menggunakan pisau atau cutter    |
| 3   |  A photograph of a PG-40 printer cartridge with its clear plastic cover removed. The cartridge is placed on a white surface, and the cover is lying next to it. The cartridge has a black and white design on its side. | Tampak cartridge PG40 setelah covernya dilepas                |

Lanjutan

| No. | Gambar  | Keterangan  |
|-----|---|---|
| 4   |    | <p>Tampak cartridge CL41 setelah covernya dilepas</p>   |
| 5   |   | <p>Suntikkan tinta ke dalam masing-masing ruang cartridge dengan volume:</p> <p>CL41 :</p> <ul style="list-style-type: none"> <li>-Cyan : 5ml</li> <li>-Magenta : 5ml</li> <li>-Yellow : 5ml</li> </ul> <p>PG40 :</p> <ul style="list-style-type: none"> <li>-Black : 20ml</li> </ul> |
| 6   |  | <p>Lem pinggiran cartridge dengan superglue/alteco, lalu ikat dengan isolasi dan tunggu hingga lem kering.</p>  |

Lanjutan

| No. | Gambar  | Keterangan   |
|-----|---|--|
| 7   |    | <p>Untuk merefill cartridge PG40 dan CI 41 bisa pula dengan tanpa membongkar cover, namun dengan memperbesar lubang pada cover cartridge dengan bor.</p> |
| 8   |   | <p>Setelah lubang dibor dan cukup untuk memasukkan suntikan, isi tinta sesuai kapasitas (lihat no.5).</p>  |
| 9   |  | <p>Namun cara dengan cara ini (no.7 dan no.8) kondisi sponge tidak bisa dicek, sudah jenuh atau belum.</p>   |
| 10  |  | <p>Pasang cartridge di alat vakum/ekstraktor lalu sedot tinta antara 0.5 sampai 1 ml.</p>  |

| No. | Gambar  | Keterangan   |
|-----|---|--|
| 11  |    | <p>Cek nozzle pada tissue atau kain handuk.</p>                              |
| 12  |   | <p>Pasang cartridge kembali ke head unit/carriage. Lakukan head cleaning</p> |
| 13  |  | <p>Jalankan resetter tool jika ingin counter cartridge kembali penuh.</p>    |

**SELAMAT MENCOBA**

[www.printermurah.com](http://www.printermurah.com)